


DETAIL VIEW

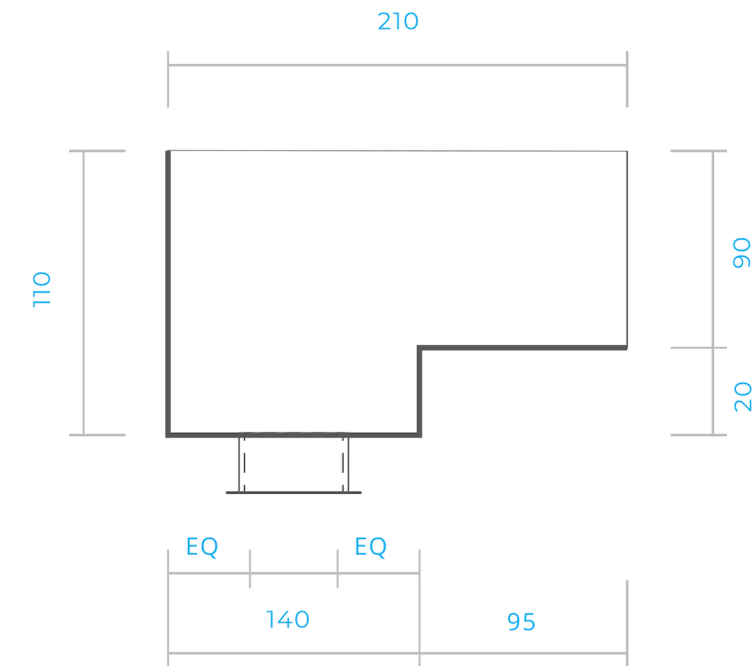

SECTION VIEW

NOTE:

- 1.Ensure nogs in place prior to Aqualine install, for fixing of wall flanges for Shower Channel
- 2.Allow minimum 145mm wide slot for channel trough to sit into prior to screed application - flanges will sit/fix on top of screed floor and against framed wall
- 3.Screed Floor will create 20mm depth for trough to sit into
- 4.Trough is 20mm deep
- 5.Outlet is 100mm stainless
- 6.'Waterproofing/Adhesive/Tile product thickness' for wall and floor required for final manufacturing of finished Grill/Grate OR final site measure for finished grill/grate upon completion of tiling
- 7.Finished Grill/Grate - 8 bars OR alternative option is Tile insert finish



WALL MOUNTED SHOWER CHANNEL
 Screed/Concrete Floor